



Emergency Hoist Brake Foot Button



The **emergency hoist brake foot button** is located on the left-hand side of the **cab floor** and is redundant to the **fail-safe** features of the Seatrax spring-applied, external contracting **band drum brakes**.

Pushing the **red button** will set all **hoist brakes** (**main, auxiliary** and **boom hoists**). To reset the **hoist brakes** for normal operating, pull the **red button** back out.

